


# 12 VG 60

## BATTERY SPECIFICATIONS



### GEL 12V60Ah

The Valen GEL – the solution for all your heavy cyclic applications! Valen Gel is a rechargeable, deep cycle, Valve Regulated Lead Acid (VRLA) battery. This high-quality Gel battery has met and exceeded all market expectations over the years, and today continues to prove its excellence by its ability to resist deep discharges and recovering after heavy draining.

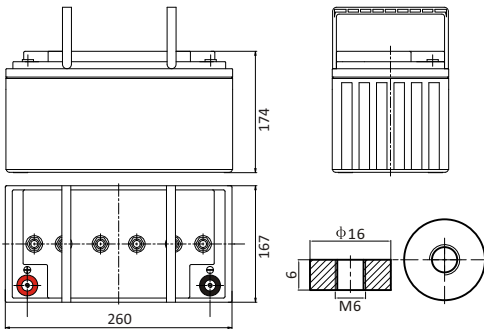

### SPECIFICATIONS

Voltage	12 Volt nominal
Number of cell	6
Design life	10 years
Nominal Capacity 25°C	
20Hr rate (10.5V)	60Ah
10Hr rate (10.5V)	55.8Ah
5Hr rate (10.5V)	48.0Ah
Dimensions	260(L)x167(W)x174(H)
Weight	21.5Kg
Plates	Heavy duty
Terminal	Insert - M6
Container/cover	ABS
Charge voltage	Cycle: Maximum charge current - 15A Voltage 2.4 vpc at 25°C Standby Voltage: 2.25 vpc at 25°C
Internal Resistance	8.8mΩ 25°C - Fully charged Battery
Electrolyte	Thixotropic Gel - Sulphuric acid
Vent	Self-sealing – 2psi operation
Operating temperature:	-25°C to +55°C

(However it is recommended that the batteries be operated in the temperature range of 20 to 30°C to obtain full life and optimum performance.)

#### Discharge Constant Current (Amperes at 25°C)

End Point Volts/Cell	15min	30min	1h	3h	5h	10h	20h
1.75V	65.3	49.0	30.1	13.9	9.60	5.58	3.06

#### Discharge Constant Power (Watts at 25°C)

End Point Volts/Cell	15min	30min	1h	3h	5h	10h	20h
1.75V	122.1	92.6	57.9	27.1	18.8	11.1	6.09

